

Product data sheet

Key card holder



Reference number

CD 590 CARD WW
Key card holder

for push-button insert ref.-no.: 531 U, 532 U, 533 U, 534 U

The key card holder is used to keep the hotel card and to ensure a high level of safety and energy savings, since all possibly powered electrical loads are switched off automatically when removing the hotel card.

The key card holder will be completed with a push-button of the JUNG portfolio.

The push-button ref.-no. 533 U with NO/NC contact and additional N-terminal is recommended. The separate N-terminal enables the illumination of the device with incandescent or LED lamp at the same potential. If the pilot lamp should not be at the same potential, please install the push-button ref.-no. 534 U with separate signalling contact.

Installation note: No plaster compensation possible. Insert must be mounted flush with the wall. Supporting frame must be on top of wallpaper.

Thermoplastic (breakproof) high-gloss
Colour:
white

Material:
thermoplastic
