

Würth Elektrogroßhandel GmbH & Co. KG
PROTEC Produktmanagement
Ludwig-Erhard-Straße 21-39
D-65760 Eschborn
www.protecclass.de

Anleitung zu Befestigungskit Modellnummer PMKM

Die magnetische Befestigung bietet eine echte Alternative zur Befestigung mit Schraube und Dübel. Rauchmelder können mit diesem Magnetsystem schnell und sauber montiert werden.

INSTALLATION:

1. Installieren des Deckenelements:

Das Deckenelement (ohne Magnet) muss an einem Platz, wie in Ihrer Rauchmelderanleitung beschrieben, montiert werden.

Entfernen Sie die Schutzfolie (a) und drücken Sie die Klebeseite für ca. 10 Sekunden (b) an die gewünschte Stelle.


Bitte beachten Sie, dass es auf einem stabilen, trockenen und staub- und fettfreien Untergrund angebracht wird. Einmal installiert kann das Element mehr nicht entfernt oder neu positioniert werden.

2. Installation des Rauchwarnmelders:


Das Rauchmelderelement (mit Magnet) ist an der Unterseite des Rauchmelders zu montieren. Entfernen Sie die Schutzfolie (a) und drücken Sie die Klebeseite für ca. 10 Sekunden (c) an die Unterseite des Melders.

3. Installieren Sie den Rauchmelder an der Decke:


Die Unterseite des Rauchmelders wird einfach gegen das Deckenelement (d) gelegt.

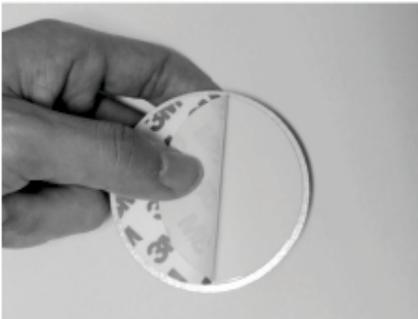

(a)

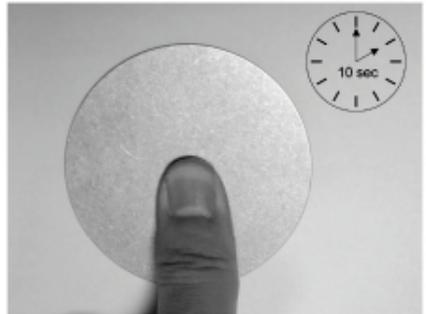

(b)

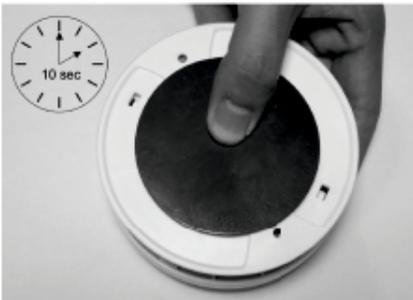

(c)



(d)

Würth Elektrogroßhandel GmbH & Co. KG
PROTEC Produktmanagement
Ludwig-Erhard-Straße 21-39
D-65760 Eschborn
www.protecclass.de

User's manual for mounting kit Model number: PMKM

The magnetic fixing offers a real alternative to fastening with screw and dowel plugs. Smoke alarms can be mounted quickly and cleanly with this magnetic assembly system.

INSTALLATION:

1. Installing the ceiling element:


The ceiling element (without magnets) has to be mounted on a correct place as described in your smoke alarm's instruction manual. Remove the protective foil (a) and place it against the ceiling. Apply light pressure (b) for at least 10 seconds. Please note it is mounted on a stable, dry and free of dust and grease area. Once installed the ceiling element cannot be removed or repositioned.

2. Installing the smoke alarm element:


The smoke alarm element (with magnets) is mounted on the base of the smoke alarm. Remove the protective foil (a) and place it against the base. Apply light pressure (c) for at least 10 seconds.

3. Installing the smoke alarm to the ceiling:


The base of the smoke alarm is simply placed against the ceiling element (d).

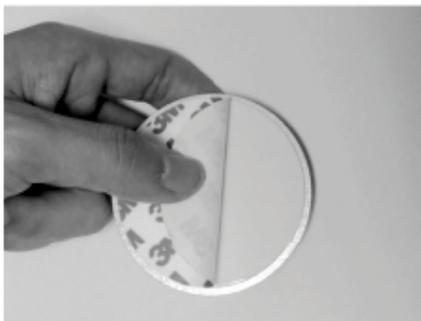

(a)

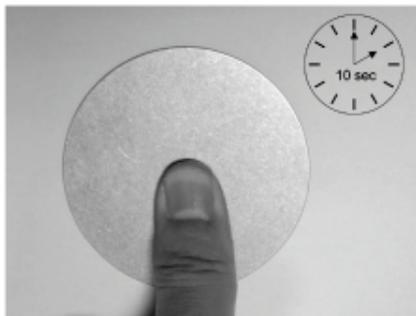

(b)

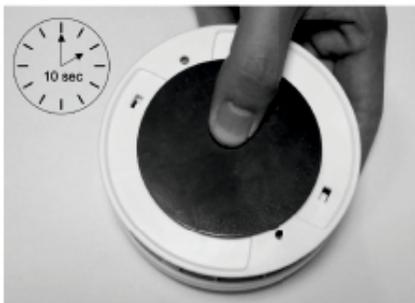

(c)



(d)